

User Manual & Installation Guide


NEC Soundbar

SP-AS

SP-AS2

SP-PS

SP-PS2

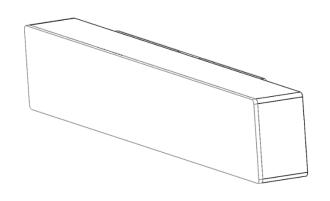

NEC Collaboration Soundbar

SP-ASCM

SP-ASCM2


SP-ASCM-IQ

SP-ASCM-IQ2

SP-PSCM

SP-PSCM-IQ

SP-PS-55IB-IQ

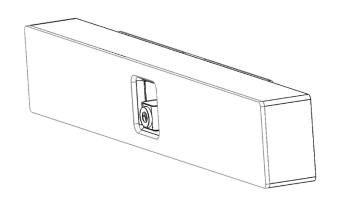

Please find your model name on the label on the rear side of the Soundbar



INDEX

| INDEX | 2 |
|--|----|
| GENERAL NOTES | 3 |
| SCOPE OF DELIVERY – SOUNDBARS ACTIVE & PASSIVE | 4 |
| CONNECTIONS - SP-AS(2) | 5 |
| IMPORTANT DEVICE SETTINGS | 5 |
| CONNECTIONS - SP-PS(2) | 6 |
| IMPORTANT DEVICE SETTINGS | 6 |
| SCOPE OF DELIVERY – COLLABORATION SOUNDBARS ACTIVE | 7 |
| CONNECTIONS – SP-ASCM(2) / SP-ASCM-IQ(2) | 8 |
| IMPORTANT DEVICE SETTINGS | 8 |
| SCOPE OF DELIVERY – COLLABORATION SOUNDBARS PASSIVE | 9 |
| CONNECTIONS - SP-PSCM(IQ) | 10 |
| IMPORTANT DEVICE SETTINGS | 10 |
| SCOPE OF DELIVERY – COLLABORATION SOUNDBAR PASSIVE InfinityBoard | 11 |
| CONNECTIONS - SP-PS-55IB-IQ | 12 |
| IMPORTANT DEVICE SETTINGS | 12 |
| ASSEMBLY / WALL MOUNTING | 13 |
| MOUNTING TO MONITOR (require optional brackets) | 14 |
| COMPATIBILITY | 15 |
| MAINTENANCE AND CLEANING | 16 |
| RECYCLING INFORMATION | 16 |



GENERAL NOTES




SCOPE OF DELIVERY - SOUNDBARS ACTIVE & PASSIVE

| ITEM | SP-AS | SP-AS2 | SP-PS | SP-PS2 | | | | | | | | |
|----------------------------|---|--------------------------------------|-----------|-------------------------------------|--|--|--|--|--|--|--|--|
| NEC SKU | 100015010 | 100015582 | 100015011 | 100015583 | | | | | | | | |
| Soundbar | 1x Soundbar | | | | | | | | | | | |
| Wallmount | 2x Wallmount B | 2x Wallmount Brackets | | | | | | | | | | |
| Screws & Washer | 4x. M4x15 Screws & Washers | | | | | | | | | | | |
| Speaker front cover grill | | 1x Speaker front grill pre-installed | | | | | | | | | | |
| Audio Amplifier | integrated None | | | | | | | | | | | |
| Analog Audio Cable (IN) | N | one | 2x (I | L/R) 2-wire / 1,5m pre-installed | | | | | | | | |
| 3,5mm Jack Cable (IN) | | ereo Jack ; 1,5m nstalled | | None | | | | | | | | |
| Power Supply Unit | 1x external pow (EU/UK Version) pre-installed | er supply unit 24V; 1.67A; 1.5r | n | None | | | | | | | | |



CONNECTIONS - SP-AS(2)

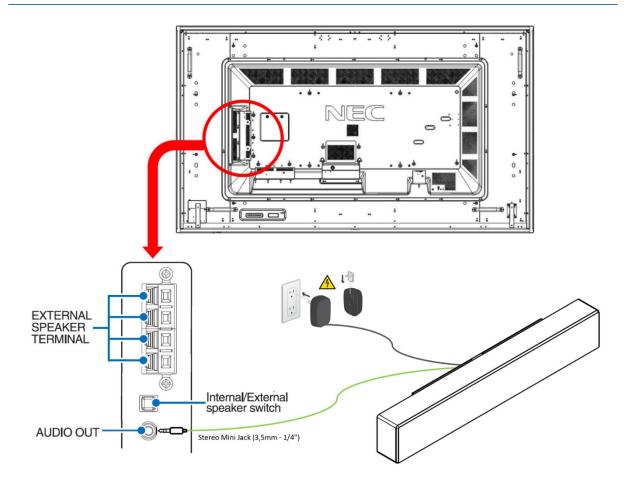

IMPORTANT DEVICE SETTINGS

Display:

- **1. Connect the soundbar**: Connect the stereo mini Jack (3,5mm 1/4") cable of the soundbar to the AUDIO OUT of the Display.
- 2. Connect the soundbar power supply: Connect the soundbar power supply to the power socket
- 3. Choose Line Out mode

FIXED — audio level over the LINE OUT connection is fixed VARIABLE — audio level over the LINE OUT connection is controlled by the IR


remote control.







CONNECTIONS - SP-PS(2)

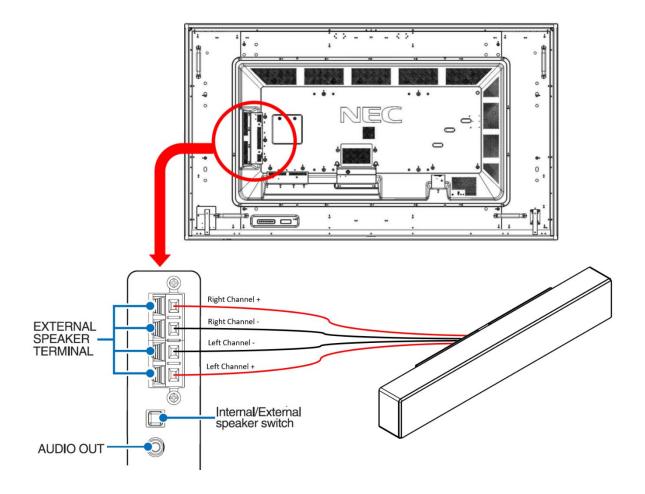

IMPORTANT DEVICE SETTINGS

Display:

1. Connect the soundbar speakers:

Connect the audio cables to the speaker terminals on the side of the Display. Red terminal is plus(+) and black terminal is minus(-). *(Label on the wires for Right and Left Channel)

2. Activate the external speakers: Push the button "Internal/External speaker switch" below the speaker terminals on the monitor to enable the external speakers.




SCOPE OF DELIVERY – COLLABORATION SOUNDBARS ACTIVE

| ITEM | SP-ASCM | SP-ASCM2 | SP-ASCM-IQ | SP-ASCM-IQ2 | | | | | |
|--|--|---------------------------------------|------------|--------------------------------------|--|--|--|--|--|
| NEC SKU | 100015077 | 100015453 | 100015301 | 100015454 | | | | | |
| Soundbar | 1x Soundbar | | | | | | | | |
| Wallmount | 2x Wallmount B | rackets | | | | | | | |
| Screws & Washer | 4x. M4x15 Screv | | | | | | | | |
| Speaker front cover grill | 4X. W4X13 301CV | 1x Speaker front grill pre-installed | | | | | | | |
| Audio Amplifier | Integrated | | | | | | | | |
| 3,5mm Audio Cable (IN) | | None | | | | | | | |
| Power Supply Unit & Cable | 1x external pow (EU/UK Version pre-installed | ver supply unit) 24V; 1.67A; 1,5n | | | | | | | |
| Camera & USB Cable | | o / USB 3.0 ; ~1,8n -installed | | IQ / USB 3.0 ; ~1,8m re-installed | | | | | |
| Microphone | 2x Microphone capsules beamforming Integrated | | | | | | | | |
| Noise Cancelling Unit & USB Cable (Audio IN) | Integrated USB 2.0 ; 1,5m pre-installed | | | | | | | | |



CONNECTIONS - SP-ASCM(2) / SP-ASCM-IQ(2)

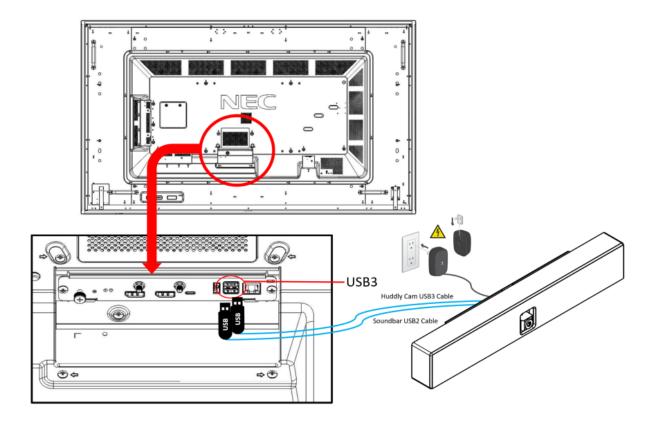

IMPORTANT DEVICE SETTINGS

Display:

- 1. Connect the soundbar audio signal: Connect the 2m USB cable (the one with the white label) from the soundbar to one of the USB2.0 ports of the OPS slot-in PC
- **2. Connect the Huddly camera**: Connect the 2m USB cable from the soundbar to one of the USB3.0 ports of the OPS/SDM slot-in PC. Do not use USB extender cables.
- **3. Connect the soundbar power supply**: Connect the soundbar power supply to the power socket.

Computing Device (OPS/SDM):

Playback device → "2 – Phnx MT103 16k"

Recording device \rightarrow "2 – Phnx MT103_16k"

Recommendation: Disable all unneeded playback devices in Windows (Sound Control Panel)




SCOPE OF DELIVERY – COLLABORATION SOUNDBARS PASSIVE

| ITEM | SP-PSCM | SP-PSCM-IQ | | | | |
|--|---|--|--|--|--|--|
| NEC SKU | 100015078 | 100015302 | | | | |
| Soundbar | 1x Soundbar | | | | | |
| Wallmount | 2x Wallmount Brackets | | | | | |
| Screws & Washer | 4x. M4x15 Screws & Washers | | | | | |
| Speaker front cover grill | 1x Speaker front grill pre-installed | | | | | |
| Analog Audio Cable (IN) | 2x (L/R) 2-wire / 1,5m pre-installed | | | | | |
| 3,5mm Audio Cable (Out) | | reo Jack ; 1,5m nstalled | | | | |
| Camera & USB Cable | 1x Huddly Go / USB 3.0; ~1,8m pre-installed | 1x Huddly IQ / USB 3.0 ; ~1,8m pre-installed | | | | |
| Microphone | 2x Microphone capsules beamforming Integrated | | | | | |
| Noise Cancelling Unit & USB Cable (Audio IN) | Integrated USB 2.0 ; 1,5m pre-installed | | | | | |



CONNECTIONS - SP-PSCM(IQ)

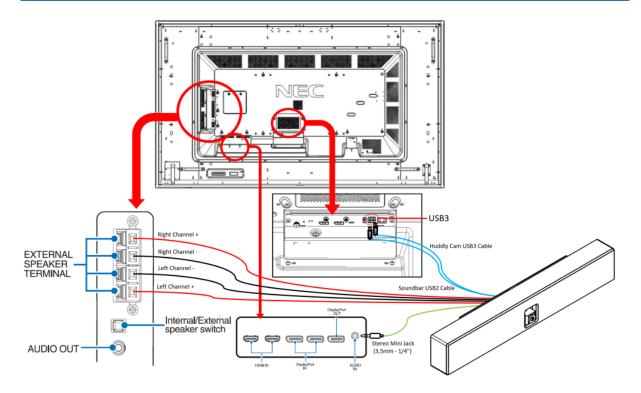

IMPORTANT DEVICE SETTINGS

Display:

- **1. Connect the soundbar audio signal in**: Connect the stereo mini Jack (3,5mm 1/4") cable of the soundbar to the AUDIO IN of the Display.
- 2. Connect the soundbar speakers:

 Connect the audio cables to the speaker terminals on the side of the power amplifier.

 Red terminal is plus(+) and black terminal is minus(-).
- **3. Activate the external speakers**: Push the button "Internal/External speaker switch" below the speaker terminals on the monitor to enable the external speakers.
- **4. Connect the soundbar audio USB**: Connect the 2m USB cable (the one with the white label) from the soundbar to one of the USB2.0 ports of the OPS slot-in PC
- **5. Connect the Huddly camera**: Connect the 2m USB cable from the soundbar to one of the USB3.0 ports of the OPS slot-in PC.
- **6. Connect the soundbar power supply**: Connect the soundbar power supply to the power socket.
- 7. Select Audio Input on the Display Menu: In the Display Menu under the AUDIO section, select AUDIO INPUT: IN



Connected Computing Device (OPS):

Playback device→"2 – Phnx MT103_16k"

Recording device→"2 – Phnx MT103_16k"

Recommendation: Disable all unneeded layback devices in Windows (Sound Control Panel)




SCOPE OF DELIVERY – COLLABORATION SOUNDBAR PASSIVE InfinityBoard

| ITEM | SP-PS-55IB-IQ |
|---|---|
| NEC SKU | 100015337 |
| Soundbar | 1x Soundbar |
| Wallmount | 2x Wallmount Brackets |
| Screws & Washer | 4x. M4x15 Screws & Washers |
| Speaker front cover grill | 1x Speaker front grill pre-installed |
| Analog Audio Cable (IN) | 2x (L/R) 2-wire / 1,5m pre-installed |
| Camera & USB Cable | 1x Huddly IQ / USB 3.0 ; ~1,8m pre-installed |
| Microphone | 2x Microphone capsules beamforming integrated |
| Noise Cancelling Unit & USB Cable (Audio IN) | Integrated USB 2.0; 1,5m pre-installed |



CONNECTIONS - SP-PS-55IB-IQ

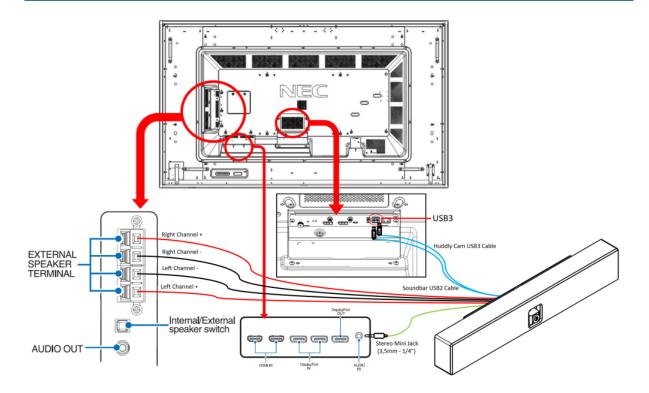

IMPORTANT DEVICE SETTINGS

Display:

- **1. Connect the soundbar audio signal in**: Connect the stereo mini Jack (3,5mm 1/4") cable of the soundbar to the AUDIO IN of the Display.
- 2. Connect the soundbar speakers:

 Connect the audio cables to the speaker terminals on the side of the power amplifier (not included). Red terminal is plus(+) and black terminal is minus(-).
- **3. Activate the external speakers**: Push the button "Internal/External speaker switch" below the speaker terminals on the monitor to enable the external speakers.
- **4. Connect the soundbar audio USB**: Connect the 2m USB cable (the one with the white label) from the soundbar to one of the USB2.0 ports of the OPS slot-in PC
- **5. Connect the Huddly camera**: Connect the 2m USB cable from the soundbar to one of the USB3.0 ports of the OPS slot-in PC.
- **6. Connect the soundbar power supplier**: Connect the soundbar power supply to the power socket.
- 7. Select Audio Input on the Display Menu: In the Display Menu under the AUDIO section, select AUDIO INPUT: IN.



Connected Computing Device (OPS):

Playback device → "2 – Phnx MT103 16k"

Recording device→"2 – Phnx MT103_16k"


Recommendation: Disable all unneeded layback devices in Windows (Sound Control Panel)





ASSEMBLY / WALL MOUNTING


Mounting location

- The ceiling and wall must be strong enough to support the monitor / soundbar and mounting accessories.
- DO NOT install in locations where a door or gate can hit the unit.
- DO NOT install in areas where the unit will be subjected to strong vibrations and dust.
- DO NOT install the monitor / soundbar next to a location where the main power supply is fed into the building.
- DO NOT install the monitor / soundbar in a location where people can easily grab and hang onto the unit or the mounting equipment.
- Allow for adequate ventilation or provide air conditioning around the monitor / soundbar, so that heat can properly dissipate away from the monitor / soundbar and from the mounting equipment.
- For soundbar to wall mounting, mounting brackets as well as 4xM3 screws and washers to fix the soundbar to mounts are included.
- Please select screws and respective screw anchors according to the wall material and structure provided on site.

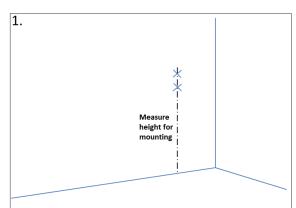

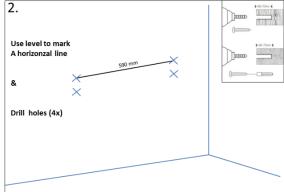

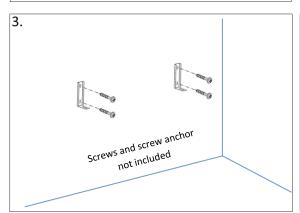


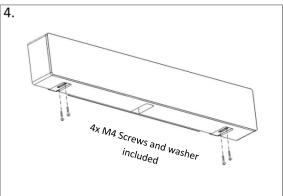



MOUNTING TO MONITOR (require optional brackets)

For soundbar to monitor mounting, optionally available mounting brackets (SP-Bracket Xy...) are required. Depending on the monitor size and monitor series those brackets vary in size and respective order number (SKU). To identify the adequate SP-Bracket please refer to the table below.

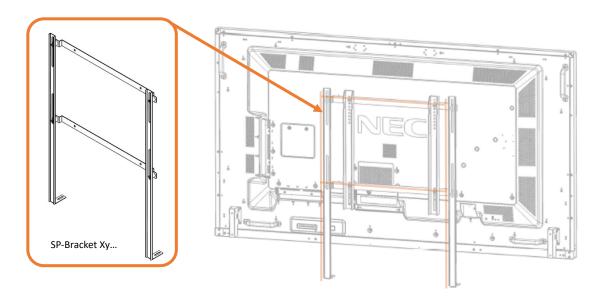

| Display Size & Series | Bracket Name and order number (SKU) | | | | | | | | | |
|-----------------------|-------------------------------------|----------|--------------------|---------------|--|--|--|--|--|--|
| Standard LFD Series | SP-Bracket 40-55 | SP-Brack | et 65-86 | SP-Bracket 98 | | | | | | |
| Displays 40-55" | 100015041 | | | | | | | | | |
| Displays 65-86" | 10001 | | L5247 | | | | | | | |
| Display 98" | | | | 100015333 | | | | | | |
| CB-Series | SP-Bracket CB6 | 55 | SP-Bracket CB75-86 | | | | | | | |
| CB Series 65-75" | 100015428 | | | | | | | | | |
| CB Series 86" | | | 100015696 | | | | | | | |



COMPATIBILITY

| | | Soundbars | | | | | | High-End-Speakers | | | | | | |
|------------------|-------------------|-----------------------------|-----------|-----------------------|-----------|-----------|-----------|-----------------------|---------------------------|-----------|-----------|-----------|-----------|-----------|
| | | | | General Collaborative | | | | | side-mount rear- mount | | | | | |
| Display Model | ers | Order Code | 100013520 | 100015582 | 100015583 | 100015453 | 100015078 | 100015454 | 100015302 | 100014632 | 100015001 | 100014985 | 100015517 | 100015612 |
| | Built-in speakers | External Speaker Order Code | SP-TF1 | SP-AS2 | SP-PS2 | SP-ASCM2 | SP-PSCM | SP-ASCM-IQ2 100015454 | SP-PSCM-IQ | SP-484SM | SP-754QSM | SP-864QSM | SP-RM3 | SP-RM3a |
| E328 | ✓ | | - | - | - | - | - | - | - | - | - | - | - | - |
| E438 | V | | - | • | - | • | - | • | - | - | - | - | - | - |
| E498 | V | | - | • | - | • | - | • | - | - | - | - | - | - |
| E558 | V | | - | • | - | • | - | • | - | - | - | - | - | - |
| E658 | V | | - | • | - | • | - | • | - | - | - | - | - | - |
| ME431 (PG, IR) | V | | - | • | - | • | - | • | _ | - | - | - | - | • |
| ME501 (IR) | ✓ | | - | • | - | • | - | • | - | - | - | - | - | • |
| ME551 (PG, IR) | V | | - | • | - | • | - | • | - | - | - | - | - | • |
| ME651 (PG) | V | | - | • | - | • | - | • | - | - | - | - | - | • |
| C750Q | ✓ | | • | • | - | • | - | • | - | - | • | - | - | • |
| C751Q SST* | V | | • | - | • | - | • | - | • | - | • | - | • | • |
| C860Q | / | | _ | • | - | • | - | • | - | - | - | • | - | • |
| C861Q SST* | / | | • | - | • | - | • | - | • | - | - | • | • | • |
| C981Q (SST)* | / | | • | - | • | - | • | - | • | - | - | - | • | - |
| V323-3 (PG)* | V | | _ | - | • | - | • | _ | • | - | - | - | • | • |
| V404 (PG)* | / | | • | - | • | - | • | - | • | - | - | - | • | |
| V484 (PG)* | V | | • | - | • | - | • | - | • | • | - | - | • | • |
| V754Q (PG)* | / | | • | - | • | - | • | - | • | - | • | - | • | • |
| V864Q (PG)* | / | Ιξ | • | - | • | - | • | - | • | - | - | • | • | • |
| V984Q (PG)* | V | Compatibility | • | - | • | - | • | - | • | - | - | - | • | - |
| M321 (PG)* | / | mo | _ | _ | _ | _ | - | _ | _ | _ | - | _ | _ | - |
| M431 (PG, PCAP)* | / | O | - | • | - | • | - | • | - | - | - | - | - | • |
| M491 (PG, PCAP)* | / | | - | • | - | • | - | • | - | - | - | - | - | • |
| M551 (PG, PCAP)* | V | | - | • | - | • | - | • | - | - | - | - | - | • |
| M651 (PG, PCAP)* | / | | _ | • | - | • | - | • | - | - | - | - | - | • |
| MA431 (PG)* | - | | • | • | • | • | - | • | - | - | - | • | • | • |
| MA491 (PG)* | - | | • | • | • | • | - | • | - | - | - | • | • | • |
| MA551 (PG)* | - | | • | • | • | • | - | • | - | - | - | • | • | • |
| P435 (PG, MG)* | - | | • | • | • | • | - | • | - | - | - | • | • | • |
| P495 (PG, MG)* | - | | • | • | • | • | - | • | - | - | - | • | • | • |
| P555 (PG, MG)* | - | | • | • | • | • | - | • | - | - | - | • | • | • |
| P754Q (PG) | / | | • | - | • | - | • | - | • | - | • | - | • | • |
| UN462A / UN462VA | - | | • | - | • | - | • | _ | • | - | - | - | • | - |
| UN552 / UN552V | - | | • | - | • | - | • | - | • | - | - | - | • | - |
| UN552S / UN552VS | - | | • | - | • | - | • | - | • | - | - | - | • | - |
| UN552A | - | | • | _ | • | _ | • | _ | • | _ | - | _ | • | - |
| UX552 | - | | • | _ | • | _ | • | _ | • | _ | - | _ | • | - |
| X554HB | / | | • | _ | • | _ | • | _ | • | _ | - | _ | _ | - |
| | / | | | | • | _ | • | _ | • | _ | _ | _ | _ | |

Perfect Compatibility

Compatible - speakers might bulge from the back surface. It might also require an additional mounting bracket
Please refer to the respective Product Datasheet for more details

Not Compatible

^{*} High-end Speakers (SP-xxSM) are not compatible with Protective Glass (PG), Mirror Glass (MG), ShadowSense Touch (SST) and 3MTM PCAP Touch PCAP Displays.



MAINTENANCE AND CLEANING

Maintenance

- Periodically check for loose screws, gaps, distortions, or other problems that may occur with the mounting equipment. If a problem is detected, please refer to qualified personnel for service.
- Regularly check the mounting location for signs of damage or weakness that may occur over time.

Cleaning

- Unplug the power supply (active soundbar).
- Gently wipe the cabinet with a soft cloth.
- To clean the cabinet, dampen the cloth with a neutral detergent and water, wipe the cabinet and follow with a dry cloth.

NOTE: DO NOT clean with benzene thinner, alkaline detergent, alcoholic system detergent, glass cleaner, wax, polish cleaner, soap powder, or insecticide. Rubber or vinyl should not be in contact with the cabinet for an extended period of time. These types of fluids and materials can cause the paint to deteriorate, crack or peel.

RECYCLING INFORMATION

NEC DISPLAY SOLUTIONS is strongly committed to environmental protection and sees recycling as one of the company's top priorities in trying to minimize the burden placed on the environment. We are engaged in developing environmentally-friendly products, and always strive to help define and comply with the latest independent standards from agencies such as ISO (International Organisation for Standardization) and TCO (Swedish Trades Union).

Disposing of your old NEC product

The aim of recycling is to gain an environmental benefit by means of re-use, upgrading, reconditioning or reclamation of material. Dedicated recycling sites ensure that environmentally harmful components are properly handled and securely disposed. To ensure the best recycling of our products, NEC DISPLAY SOLUTIONS offers a variety of recycling procedures and gives advice on how to handle the product in an environmentally sensitive way, once it has reached the end of its life. All required information concerning the disposal of the product and country-specific information on recycling facilities can be found on our following websites:

https://www.nec-display-solutions.com/p/greenvision/en/greenvision.xhtml (in Europe), https://www.nec-display.com (in Japan) or https://www.necdisplay.com (in USA)